1. FLAG BANNER **CONTENT** AND GRAPHIC **PREPARATION**













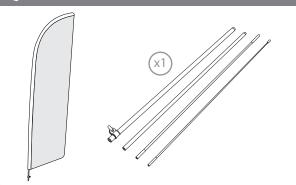

Open the bag, check the content of the bag and take out all the pieces carefully.

To set-up the flag banner, you must first sew the printed fabric and the tensor rope (supplied separately) to the pole sheath.

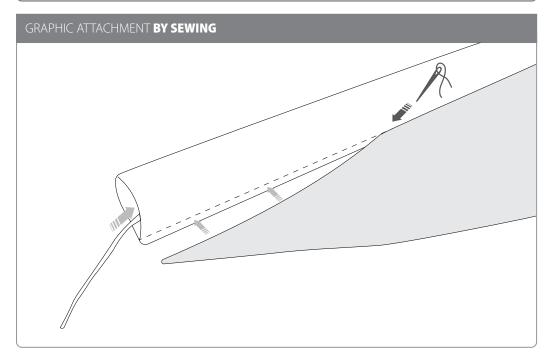

For those cases in which the graphic is **supplied by the client,** we recommend making use of the materials listed in the following **QR code** (scan for downloading Excel file). Please contact us or visit www.cashdisplay.com for more information.



2. SET UP THE **POLE** AND FIT **THE FLAG**









