cashdisplay

www.cashdisplay.com

ENGLISH

DIGITAL DISPLAY 55”

USER MANUAL

Please read this manual before setting up your digital display.

Reference **14270 | 14271**



Safety Instructions

The digital display is for indoor use only. Do not use near water. Do not store in humid places.

Install the display on a level surface to avoid accidents. The device's ventilation grills must not be blocked.

Cleaning the device should be done with a microfiber cloth. Make sure it is turned off and unplugged. Do not spray any cleaning solution directly on the equipment.

Unplug the device from the power source when not in use.

Product Features

It comes with an Android-based operating system, featuring a simple and user-friendly design.

You can connect a mouse and keyboard via the USB port for easy use, just like a computer.


To download applications, you will need the **APKPure** app, which allows you to download Android apps such as YouTube, Chrome, or Instagram.

The device comes with pre-installed basic apps and an exclusive app for playing videos and images.

Internet connectivity is available via Wi-Fi and LAN.

Usage Instructions

1. Main Display Menu

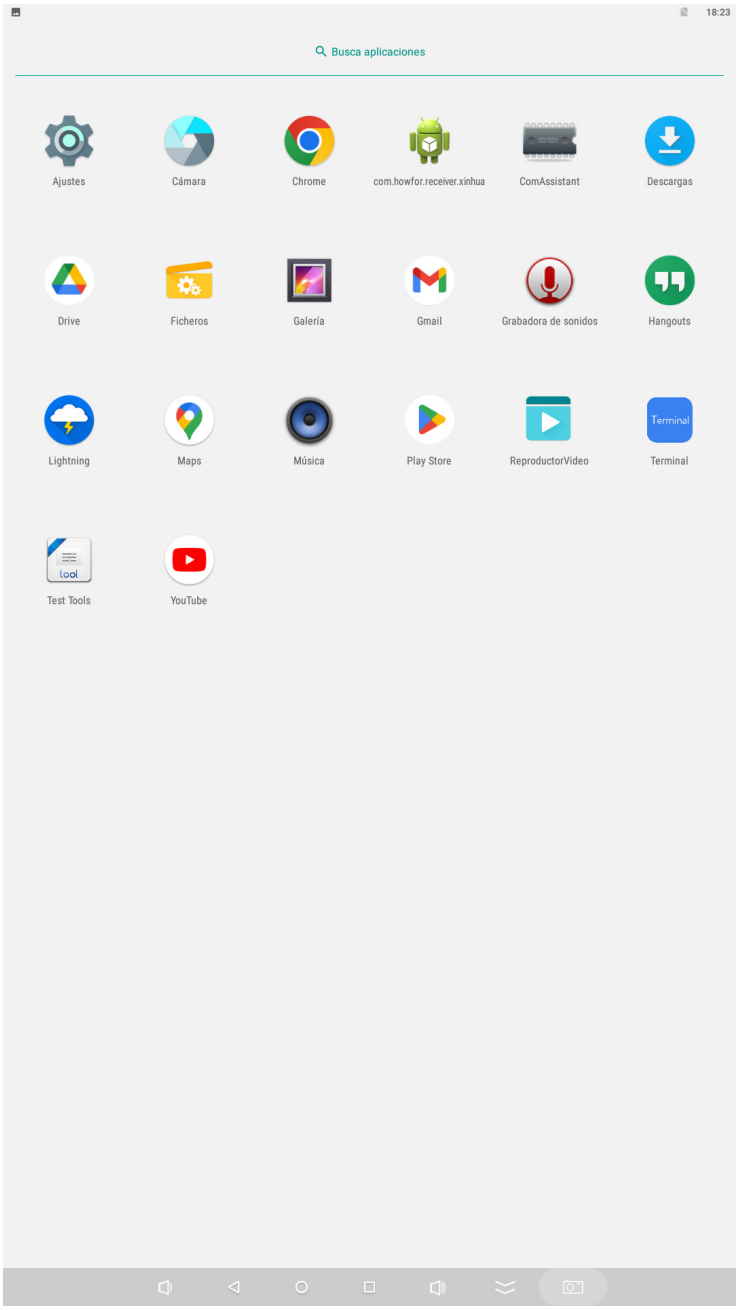

Settings: From here, you can configure all the options of your display, such as Wi-Fi, screen, applications, users, and more.

Usage Instructions

Browser: This allows you to perform internet searches, display web pages, etc.

Downloads: This section stores all downloads made from the browser.

Files: From this section, you can access the content stored on your display. If a USB device is connected, you can also access its content from here.

Video Player: This app allows you to play video clips.

Autoplay: This is the main app for content management.

Comassistant: This is another system settings section. We recommend not using this section. To configure our device, please use the ‘Settings’ section mentioned previously.


Other Apps: Drive, Gmail, YouTube, Maps, Play Store, etc.

2. APP Terminal


This app, installed on the display, allows for continuous looping of video and image content, as well as restricting unauthorized access to the display.

Follow the steps below:


1. To begin, open the '**Terminal**' app. The main screen will appear.

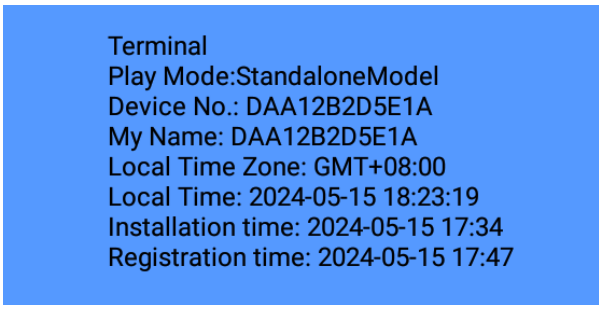


2. Use the remote to double-click the "**Back**" button, or use the mouse to double-click the right button, or tap the top-right corner **5 times** consecutively. This will open the app menu. Select ADVANCED.

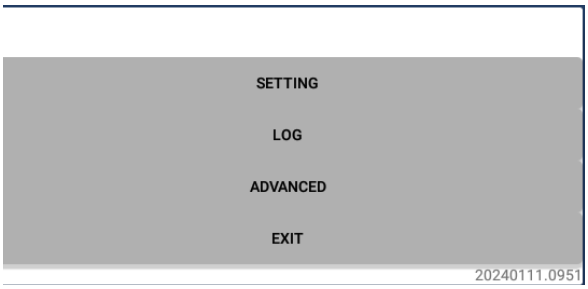

3. In the next menu, choose the START STAND ALONE MODE for standalone playback mode. The Terminal app will automatically restart and switch to START NETWORK MODE.

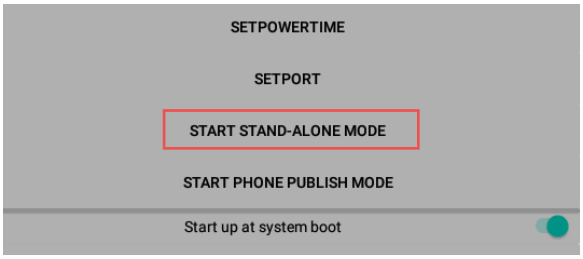


4. For touch-screen displays, we suggest disabling the bottom menu to prevent unauthorized users from accessing the device outside the Terminal APP. This option can be found in Settings > Auxiliary Function > Gestures Show Navigation Bar.

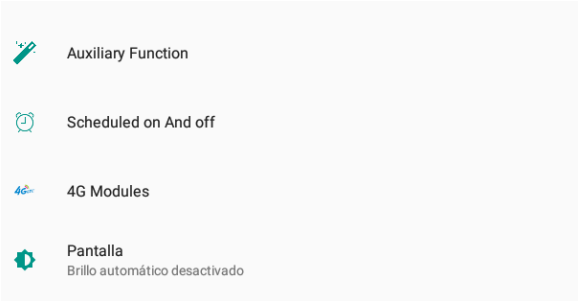

2.1 Folder Creation

1. First, plan the split-screen layout model that you will use. For this example, we will use the 3-1 split-screen model. (See Appendix 1 for screen models).

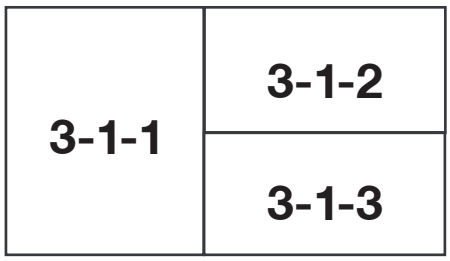

2. Connect the USB drive to a computer, and create new folders in the root directory named “3-1-1,” “3-1-2,” and “3-1-3” to match the split-screen model you plan to use. It’s important that all files within each folder are compatible; otherwise, they will not function properly.

3. Place the media content in each folder according to the section of the screen where you want it to display.


4. Open the **Terminal APP** on the display and connect the USB device. The content will automatically be copied to the internal memory of the display and will start playing once the transfer is complete. You can then remove the USB.

Usage Instructions

The files will remain stored in the device's internal memory under the Files section.

Internal Memory/Android/data/com.howfor.player/files/howfor_player/standalone/programs

Appendix 1

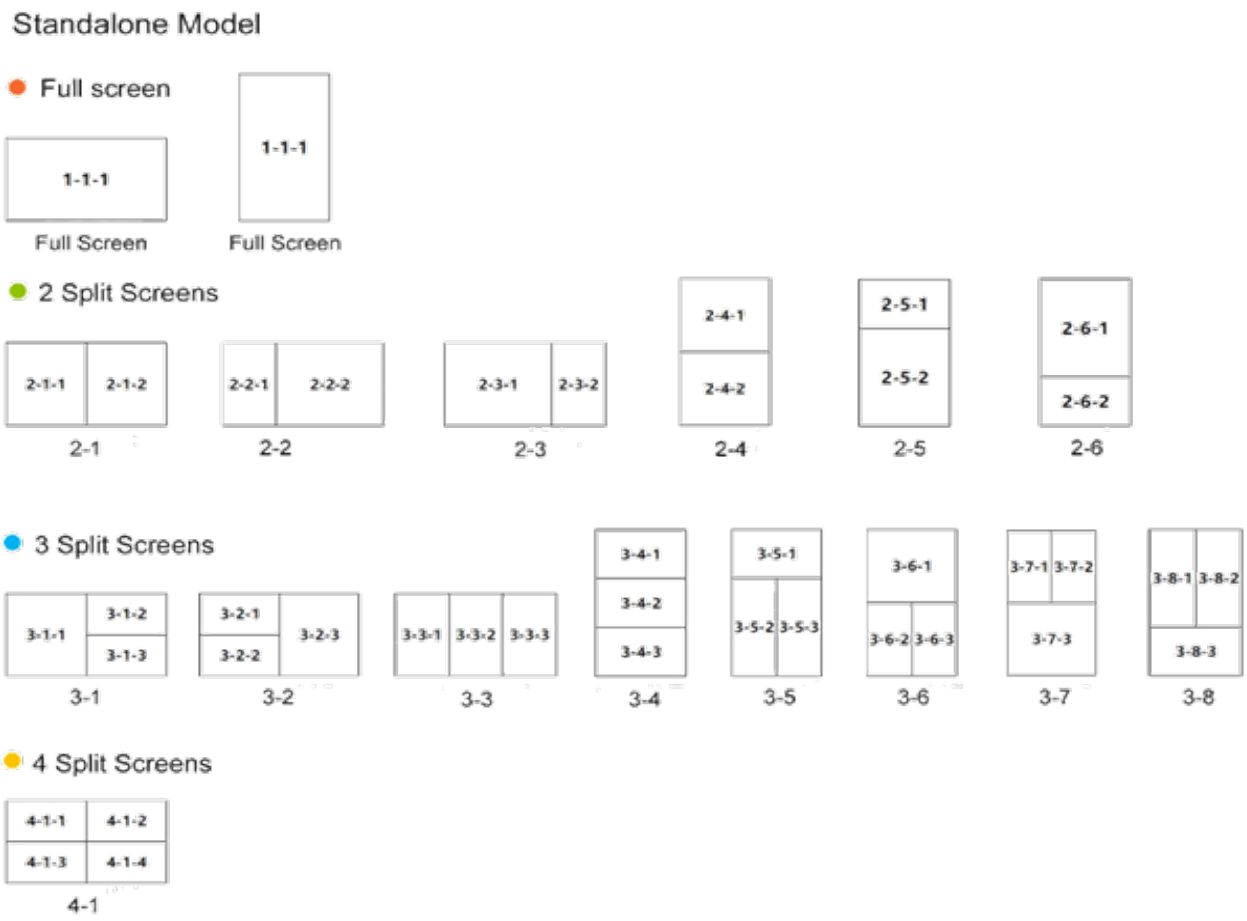

Appendix 2

How to exit the Terminal app: Use the remote by double-clicking the "Back" button, or use the mouse by double-clicking the right button. On the touch screen, tap the top-right corner 5 times consecutively. Select "Exit" from the pop-up menu.

Supported image formats: png, jpg, jpeg.
Supported video formats: mp4, avi, mkv.
Image transition time: Fixed at 5 seconds.