cashdisplay

www.cashdisplay.com


ENGLISH

DIGITAL DISPLAY 70”

USER MANUAL

Please read this manual before setting up your digital display.

Reference **14272**

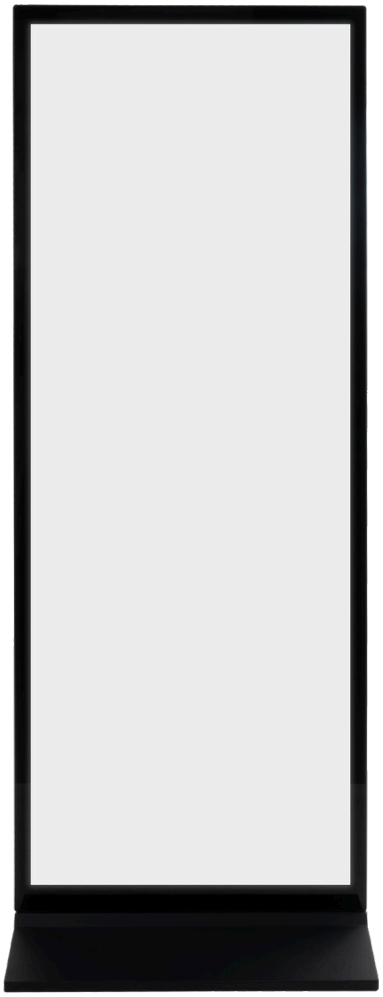

Safety Instructions

The digital display is for indoor use only. Do not use near water. Do not store in humid places.

Install the display on a level surface to avoid accidents. The device's ventilation grills must not be blocked.

Cleaning the device should be done with a microfiber cloth. Make sure it is turned off and unplugged. Do not spray any cleaning solution directly on the equipment.

Unplug the device from the power source when not in use.

Product Features

It comes with an Android-based operating system, featuring a simple and user-friendly design.


You can connect a mouse and keyboard via the USB port for easy use, just like a computer.

To download applications, you will need the **APKPure** app, which allows you to download Android apps such as YouTube, Chrome, or Instagram.

The device comes with pre-installed basic apps and an exclusive app for playing videos and images.

Internet connectivity is available via Wi-Fi and LAN.

1. Main Display Menu

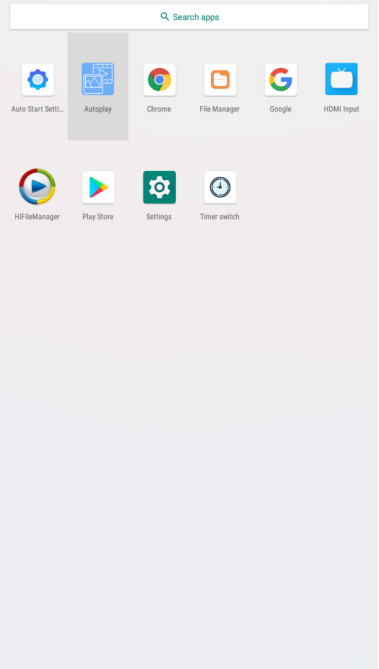

Settings: From here, you can configure all the options of your display, such as Wi-Fi, screen, applications, users, and more.

Browser: This allows you to perform internet searches, display web pages, etc.

Downloads: This section stores all downloads made from the browser.

Files: From this section, you can access the content stored on your display. If a USB device is connected, you can also access its content from here.

Video Player: This app allows you to play video clips.

Autoplay: This is the main app for content management.

Other Apps: Drive, Gmail, YouTube, Maps, Play Store, etc.

2. Autoplay

This app, installed on the display, allows video and image content to loop continuously.

1. To begin, open the app, and on the home screen, you will see two options: “General Settings” and “Screen Setup in Portrait or Landscape Mode.”

2. Select the “General Settings” option and configure it as shown in the next image. The “Copy Mode” setting allows the files in the folder named “Autoplay” on your USB to be copied and played from the app.




4. To continue, insert the USB into the display and return to the Autoplay app’s home screen. Double-click the play icon. If your files have been created correctly, the content from the folder will play on your display.

2.1 Folder Creation

1. You need to create a folder named “Autoplay” on your USB.

For example, if you want to play the 1-image area pattern with 3 images continuously, you should set the screen in portrait mode and select the first option. Then, create the images with the following names: 1.jpg, 2.jpg, 3.jpg, and add them to the Autoplay folder on your USB.

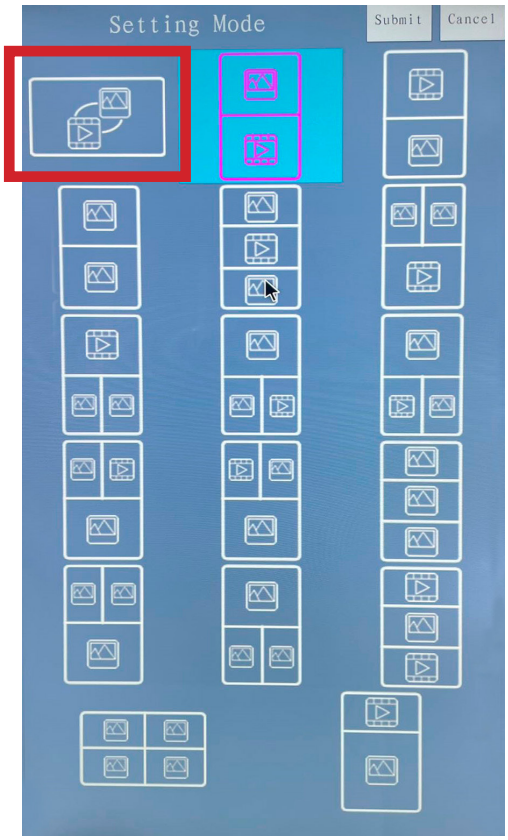

If, for example, you want to play the 2-image area pattern, you should set the screen to portrait mode and select the second option. Then, create the images with the names: 1.jpg, 2.jpg.

