
1. GRAPHIC + ANTIREFLECTION PROTECTOR **PLACEMENT**


CONTENT

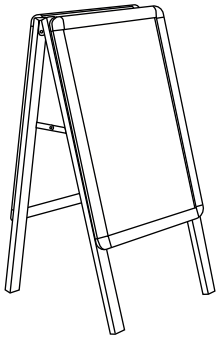

Open and check the content of the boxes and take out all the pieces carefully.

For setting-up the Sidewalk Board, you must place its graphics (supplied separately) to the upper Click Frame following the **next steps** describre below.

GRAPHIC ATTACHMENT **BY CLICK FRAME**

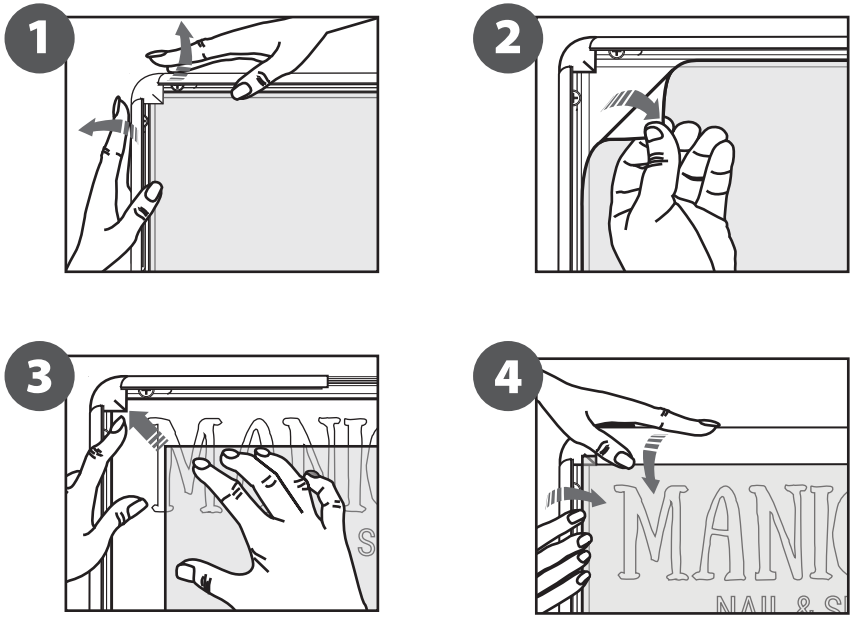

MERIDA 10.337 | 10.119 | 10.338 | 10.122 | 10.339 | 10.124 *ASSEMBLY INSTRUCTIONS*

2. SET UP SIDEWALK BOARD **STRUCTURE**

