
1. GRAPHIC + ANTIREFLECTION PROTECTOR **PLACEMENT**


CONTENT

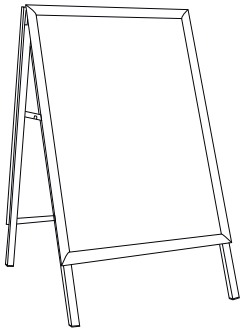

Open and check the content of the boxes and take out all the pieces carefully.

For setting-up the Sidewalk Board, you must place its graphics (supplied separately) to the upper Click Frame following the **next steps** describre below.

GRAPHIC ATTACHMENT **BY CLICK FRAME**

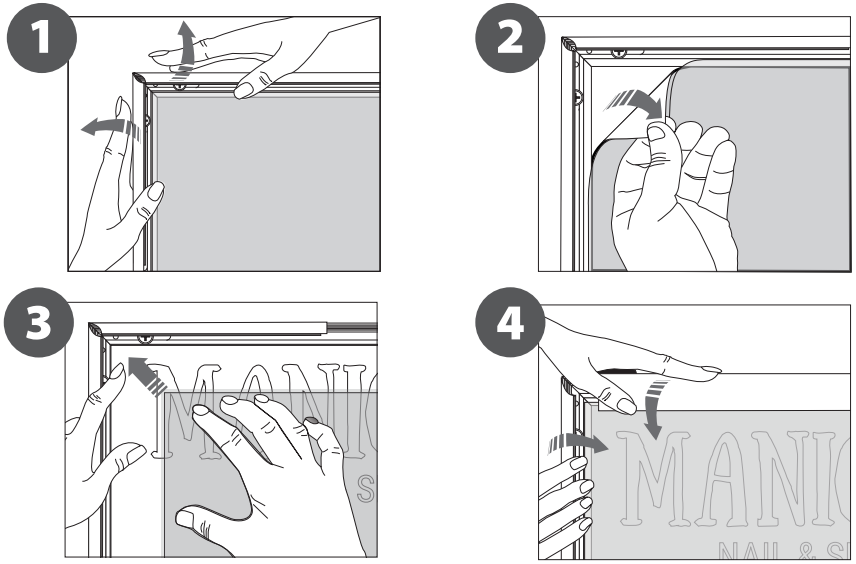

ECO ABOARD OUTDOOR MITRED 32MM *ASSEMBLY INSTRUCTIONS*
13.955-A1 | B2 | B1

2. SET UP SIDEWALK BOARD **STRUCTURE**

